SILVER

GOPRO HERO3

DIGITAL CINEMA POCKET GUIDE





GoPro Hero3 (Silver) Pocket Guide version 1.1 based on HD3.02/HD3.10

GOPRO HERO3 POCKET GUIDE

Copyright and Disclaimer

This guide is not a substitute for full comprehension of the GoPro Hero3 (Silver) and its functionality. Users and customers should read all material provided by GoPro with its products including, but not limited to: manuals, reports, changelogs, white papers, and digital documents.

Evan Luzi and The Black and Blue assume no responsibility for losses or damages that arise from the use of this document.

Due to continually evolving technology, the information within this guide, while researched and believed to be correct, may change rapidly and without notice. No false information was knowingly applied and information was supplied with an earnest care for clarity.


Still, it is provided without warranty or guarantee.

This document and visual presentation of this data, in this form, as well as select text, copy, images, graphs and charts are copyrighted by Evan Luzi and The Black and Blue. All rights reserved.

Those wishing to inquire on any of these issues may contact The Black and Blue at http://www.theblackandblue.com.



RESOLUTION

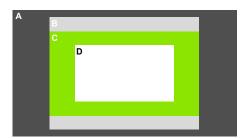

A. 1080 High Definition 1920 x 1080 Pixels

B. 960 High Definition 1280 x 960 Pixels

C. 720 High Definition 1280 x 720 Pixels


D. WVGA Standard Definition 848 x 480 Pixels

All resolutions are progressive

MENU MAP

Camera User Interface Flow Chart

Navigate menu using Shutter and Power buttons

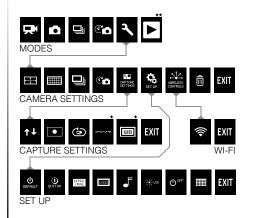

* Not shown on Hero3+ cameras

** **Playback** only appears if connected to TV or

LCD Touch BacPac.

VIDEO FORMATS

Available Recording Formats

Format is tied to resolution and field of view (FOV)

Format Resolution		Field of View		
1080p	1920x1080 (16:9)	UW/M/N		
960p	1280x960 (4:3)	Ultra Wide		
720p	1280x720 (16:9)	UW / M* / N*		
WVGA	848x480 (16:9)	Ultra Wide		

UW = Ultra Wide, M = Medium, N = Narrow

** Hero3+ model only

Hero3 Available Framerates

Format	Framerates
1080p	24, 25, 30
960p	25, 30, 48, 50
720p	25*, 30*, 50, 60
WVGA	100*, 120*

*Not available in Protune recording mode

Hero3+ Available Framerates

Format	Framerates
1080p	25, 30, 50, 60
960p	25, 30, 50, 60
720p	25, 30, 50, 60, 100, 120
\\/\/C \	50 60 100 120

RECORDING

Approximate Record Times

With fixed data rate AVC encoder (in minutes)

Format	2GB	4GB	8GB	16GB	32GB	64GB
Protune (35Mbps)	8	14	29	57	114	228
Standard (15Mbps)	18	33	67	133	267	533

Protune is not available on the Hero3+ Silver

Formatting a Memory Card

Formatting in-camera is recommended for best use

SETTINGS > CAMERA SETTINGS > DELETE > ALL

Memory Card Requirements

Card Type: microSD, microSDHC, microSDXC

Capacity: 4, 8, 16, 32, or 64GB

Speed: All speed ratings OK; class 10 or higher required for Protune or 0.5 Time Lapse mode



/ersion 1.1 based on HD3.02.03.00/HD3.10.01.09

GOPRO HERO3 (SILVER) POCKET GUIDI

this guide © theblackandblue.com



WiFi Remote Control

Syncing Instructions:

1. Turn on the GoPro Wi-Fi Remote.

2. While holding O, press and release ②
3. Once you see ⇒ , you can release O

4. A check ✓ will appear once the Wi-Fi Remote and camera have successfully paired.

The Wi-Fi Remote can control up to 50 cameras at a time at a distance up to 600 feet (180 meters)

GoPro Tablet/Smartphone App

Available for iOS and Android

Syncing Instructions:

- 1. Install the GoPro App from your phone's App Store
- 2. Enable WiFi on the GoPro via the button on the side
- **3.** Join the Wi-Fi Network ("GOPRO-BP-XXXXXX") *

 Default password is "goprohero"*
- 4. Open the GoPro app on your device
- 5. Select your camera to connect to it

*Network and password may be different if you made custom settings during a software install or update

WI-FI CONTROL

Battery Life (in Minutes)

WiFi Off	Remote*	GoPro App*
Her	o3+	
135	120	90
180	160	110
150	135	95
140	125	90
165	145	100
He	ro3	
135	120	105
105	90	90
120	105	105
105	90	90
	Her 135 180 150 140 165 Her 135 105	Hero3+ 135 120 180 160 150 135 140 125 165 145 Hero3 135 120 105 90 120 105


* WiFi Remote and GoPro App require the GoPro's WiFi to be on

Battery Specifications

Hero3 Battery: 1050 mAH, 3.7V, 3885 mWh **Hero3+ Battery:** 1180 mAH, 3.7V, 4366mWh

Charge Time (80%): 60 min. Charge Time (100%): 120 min.

Camera Body (Hero3+ & Hero3)

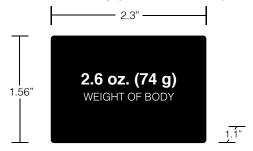

Measurements for camera body only

With Waterproof Housing

Width (in) x Height (in) x Depth (in) x Weight (g)

Hero3+ with Housing: $2.6" \times 2.4" \times 1.5" \times 136g$ Hero3 with Housing: $3" \times 3" \times 1.56" \times 163g$

HERO3+ housing is waterproof up to 131' / 40m HERO3 housing is waterproof up to 197' / 60m

DIMENSIONS

GoPro Telephone Support

North America


USA (Toll-Free)1-800-883-681	1
Outside Continental US1-866-766-927	2

International

United Kingdom (Toll Free))44-800-845-6998
United Kingdom	44-20-7084-9725
Austria	43-1-2530840-577
Denmark	45-36-92-78-03
France	33-1-79-99-40-04
Germany	49-511-26098-2118
Ireland	
Italy	39-02-3631-1460
Netherlands	31-20-708-4090
Norway	
Portugal	351-30-880-1840
South Africa	27-10-500-1991
Spain	34-93-184-5140
Sweden	
Switzerland	41-22-588-3000

Rental House:

CONTACTS

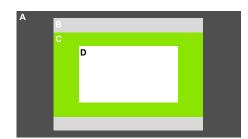

A. 1080 High Definition 1920 x 1080 Pixels

B. 960 High Definition 1280 x 960 Pixels

C. 720 High Definition 1280 x 720 Pixels

D. WVGA Standard Definition

848 x 480 Pixels

0412-481-86-48.

60-87-26-36-34.....

All resolutions are progressive

Switzerland.....41-22-588-3000

0182-0394-8-94.....nabaw2

South Africa.....27-10-500-1991

Portugal......351-30-880-1840

Norway......47-21-03-30-92

Netherlands.....31-20-708-4090

1460 Nation 1460 0721-486-1270

Germany.....49-511-26098-2118

Prance.....33-1-79-99-40-04

778-048062S-1-64.....sirlsuA

United Kingdom.....44-20-7084-9725


United Kingdom (Toll Free)......44-800-845-6998

Outside Continental US......1-866-766-9272

7188-688-008-1.....(9917-IIOT) ASU

Camera User Interface Flow Chart

Navigate menu using Shutter and Power buttons

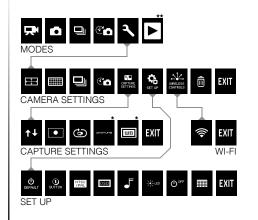

* Not shown on Hero3+ cameras ** Playback only appears if connected to TV or LCD Touch BacPac.

Available Recording Formats

Format is tied to resolution and field of view (FOV)

Format	Resolution	Field of View
1080p	1920x1080 (16:9)	UW/M/N
960p	1280x960 (4:3)	Ultra Wide
720p	1280x720 (16:9)	UW / M* / N*
WVGA	848x480 (16:9)	Ultra Wide

UW = Ultra Wide, M = Medium, N = Narrow ** Hero3+ model only

Hero3 Available Framerates

Format	Framerates
1080p	24, 25, 30
960p	25, 30, 48, 50
720p	25*, 30*, 50, 60
WVGA	100*, 120*

*Not available in Protune recording mode

Hero3+ Available Framerates

rormat	Framerates
1080p	25, 30, 50, 60
960p	25, 30, 50, 60
720p	25, 30, 50, 60, 100, 120
WVGA	50, 60, 100, 120

Approximate Record Times

With fixed data rate AVC encoder (in minutes)

	Format	2GB	4GB	8GB	16GB	32GB	64GB
	Protune (35Mbps)	8	14	29	57	114	228
	Standard (15Mbps)	18	33	67	133	267	533

Protune is not available on the Hero3+ Silver

Formatting a Memory Card

Formatting in-camera is recommended for best use

SETTINGS > CAMERA SETTINGS > DELETE > ALL

Memory Card Requirements

Card Type: microSD, microSDHC, microSDXC

Capacity: 4, 8, 16, 32, or 64GB

Speed: All speed ratings OK; class 10 or higher required for Protune or 0.5 Time Lapse mode



Rental House:

International

North America

GOPRO HERO3 (SILVER) POCKET GUIDE

Hero3 with Housing: 3" x 1.56" x 163g Hero3+ with Housing: 2.6" x 2.4" x 1.5" x 136g

(g) theight (ii) htgial x (ni) theight (iii) htgial x (ni) htgial x (ni)

With Waterproof Housing



GoPro Telephone Support

HERO3 housing is waterproof up to 197' / 60m HERO3+ housing is waterproof up to 131' / 40m

Measurements for camera body only



Charge Time (100%): 120 min. Charge Time (80%): 60 min.

Hero3+ Battery: 1180 mAH, 3.7V, 4366mWh Hero3 Battery: 1050 mAH, 3.7V, 3885 mWh

Battery Specifications

* WiFi Remote and GoPro App require the GoPro's WiFi to be on

06	06	102	sq184 q099
102	102	150	20p 30fps
06	06	102	20p 60 fps
102	150	135	2080 sq108
	8o1	ιəΗ	
100	971	465	2010 g027
06	152	140	720p 120fps
96	132	120	sd109 d096
110	160	180	1080p 30fps
06	150	132	sq108 q080t
	+80	Her	

*qqA o19ob *etomoff Ito NiFi W Battery Life (in Minutes)

settings during a software install or update Metwork and password may be different if you made custom

this guide © theblackandblue.com

5. Select your camera to connect to it 4. Open the GoPro app on your device

Default password is "goprohero"*

3. Join the Wi-Fi Network ("GOPRO-BP-XXXXXX") * 2. Enable WiFi on the GoPro via the button on the side 1. Install the GoPro App from your phone's App Store

Syncing Instructions:

biorbnA bns 20i 10f əldslisvA

GoPro Tablet/Smartphone App

time at a distance up to 600 feet (180 meters) The Wi-Fi Remote can control up to 50 cameras at a

camera have successfully paired.

4. A check ✓ will appear once the Wi-Fi Remote and

3. Once you see => you can release O 2. While holding O, press and release 9

1. Turn on the GoPro Wi-Fi Remote.

Syncing Instructions:

WiFi Remote Control